





Installation instruction
Installationsanleitung
Instruction de l'installation
Instrucción de instalación
Instrução de instalação
Istruzioni per l'installazione

URIMAT *urinal partition HPL High Pressure Laminate*
urinal trennwand HPL
cloison d'urinoir HPL
separador de urinarios HPL
divisória de urinol HPL
divisorio per orinatoio HPL


Article: 35.004

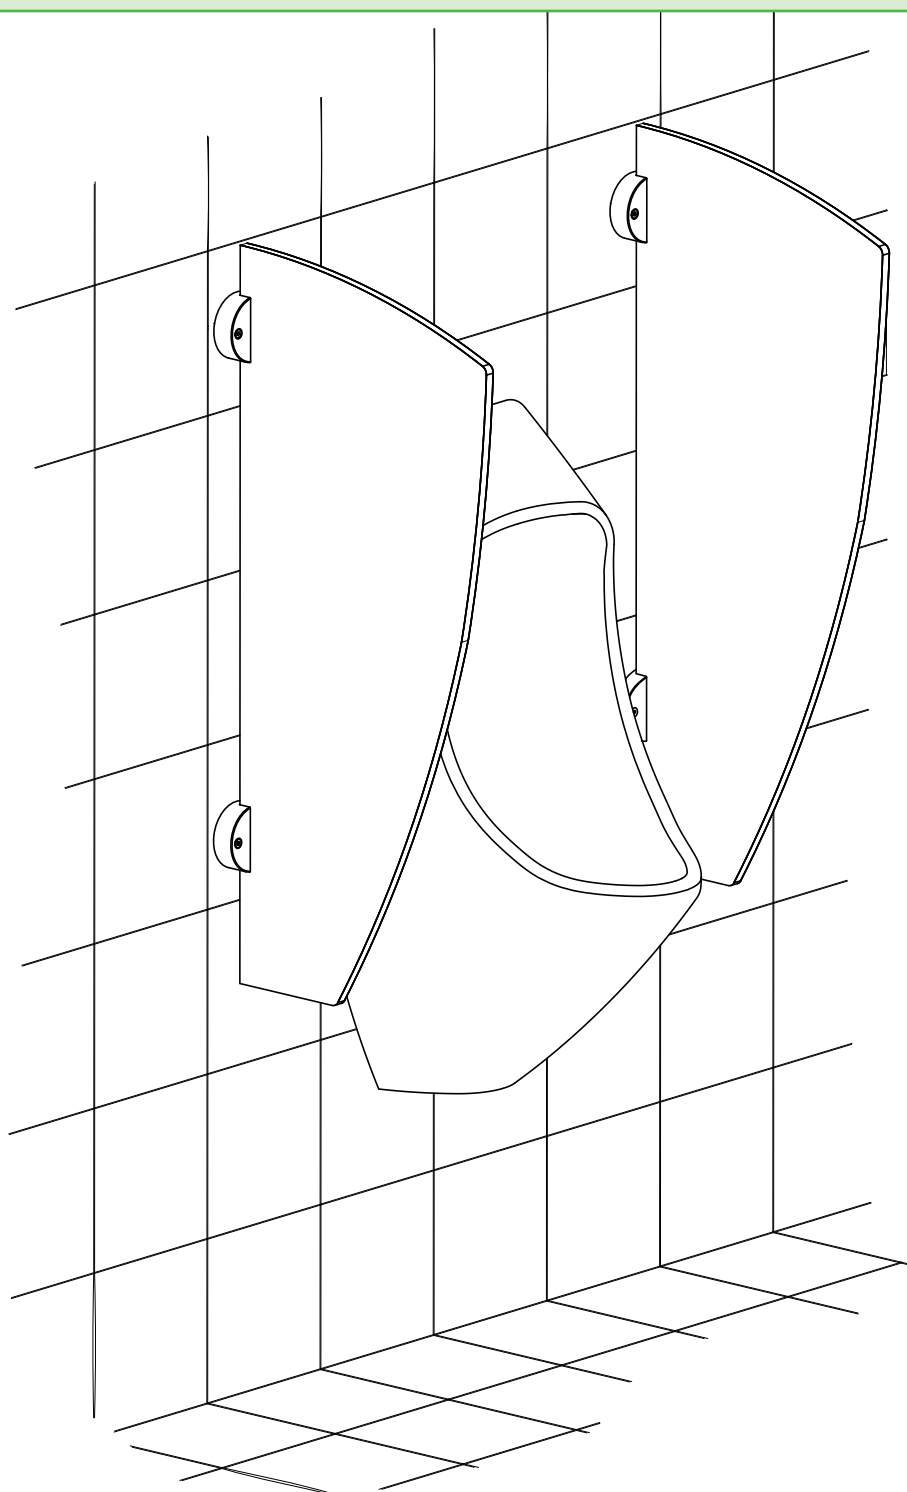


Supplied/Geliefert/Fourni
Suministro/Fornecido/Fornito

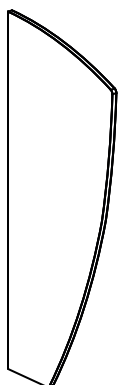

1 x Partition Board

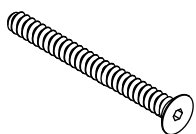

4x 6x80mm
Torx screws INOX




4x 6x50mm Dowel




4x 5x25mm
Torx screws INOX



1

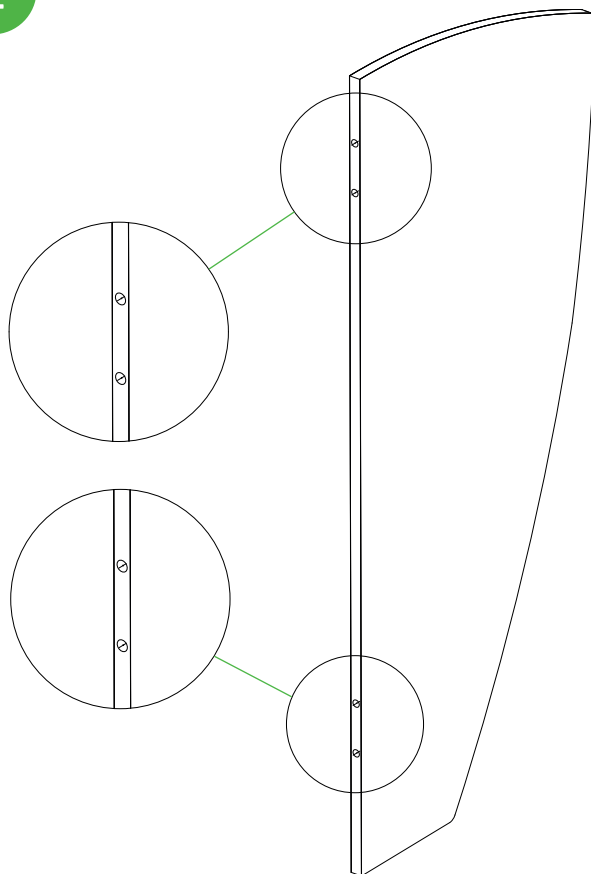


2




Lubricate
torx screw 5x25mm
prior fastening

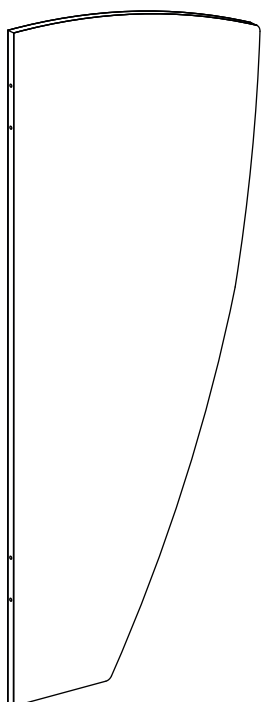


3

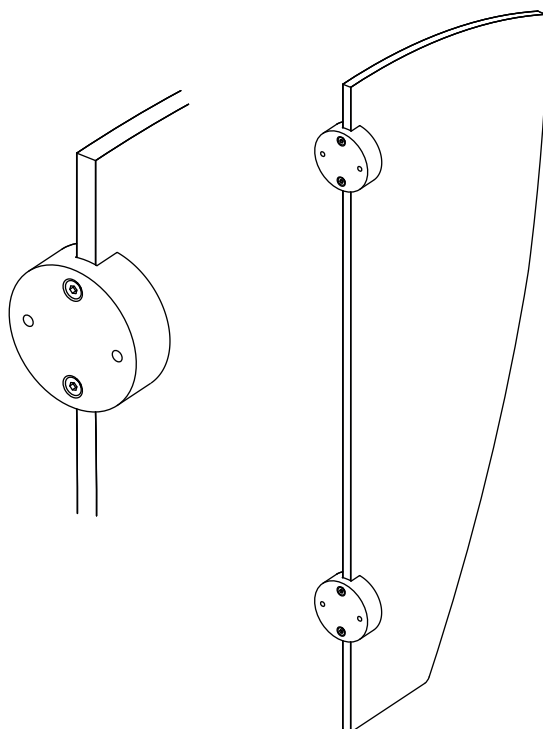


4

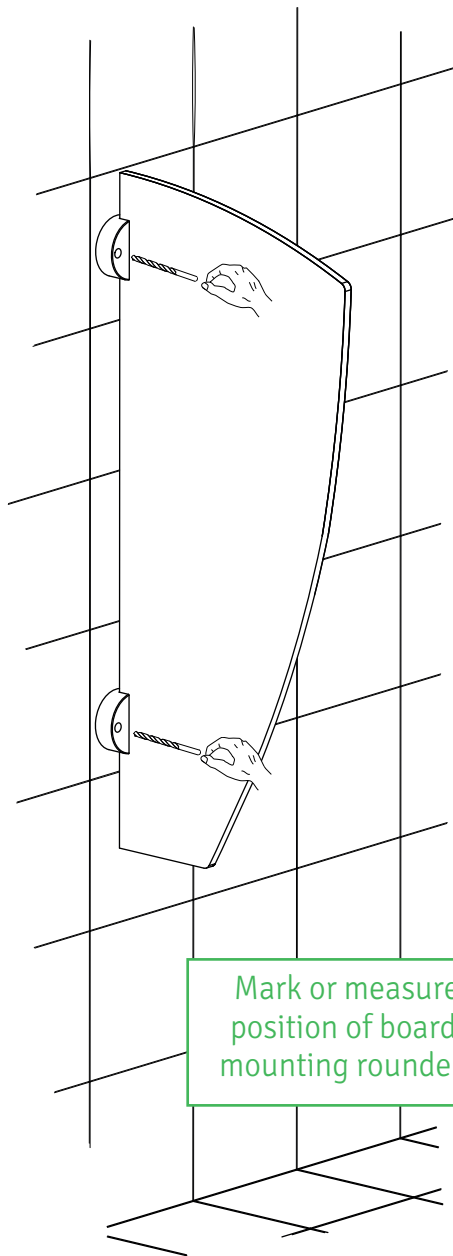

Mark or measure
position of board
mounting roundels

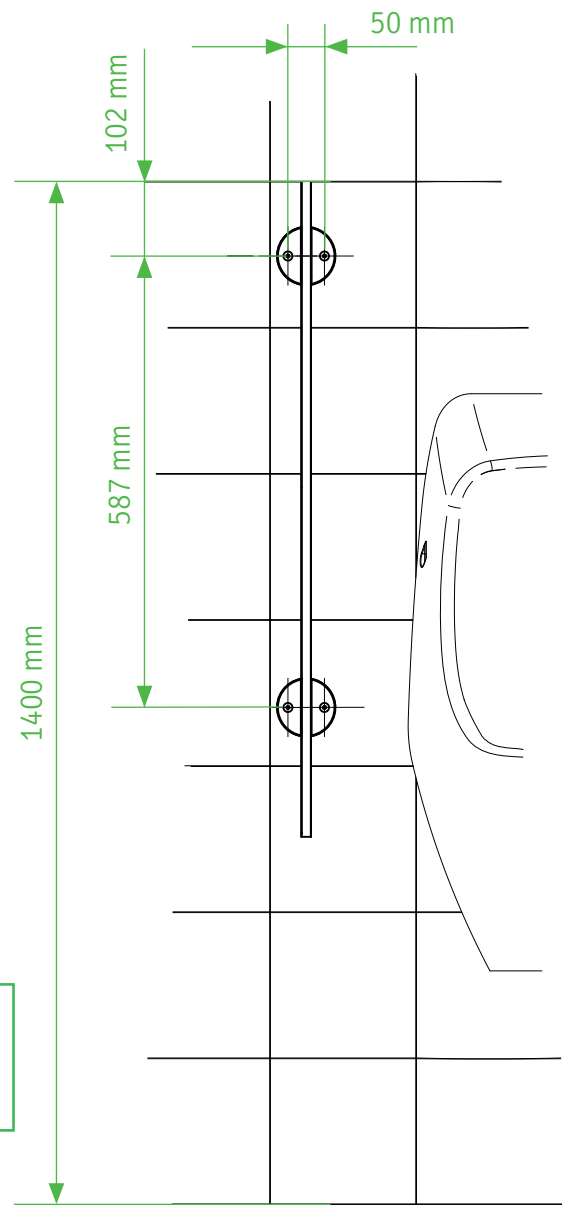


5

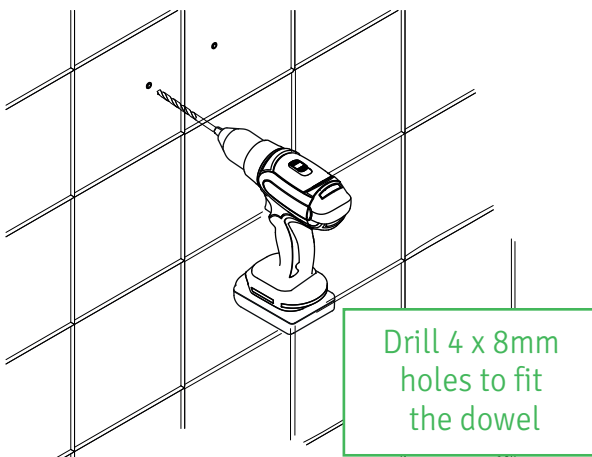

Drill 4 x 8mm
holes to fit
the dowel

6

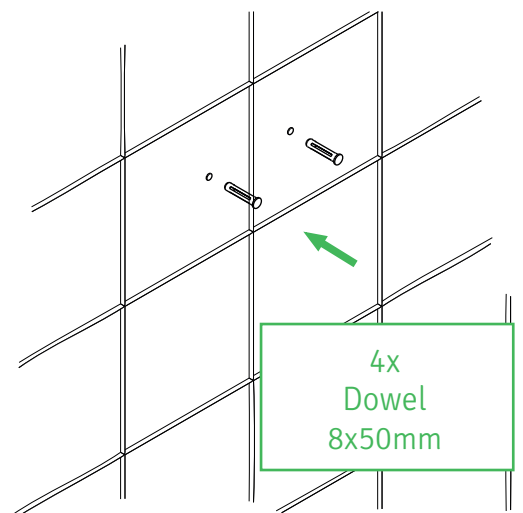

4x
Dowel
8x50mm

